

8. Commissioning

Parallel in single phase


Step 1: Check the following requirements before commissioning:

- ⌘ Correct wire connection
- ⌘ Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 4 of each unit. And then shut down all units.

NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.

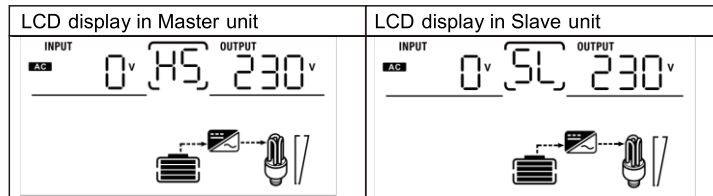






NOTE: Master and slave units are randomly defined.

Table Of Contents











1 About This Manual.....	1
1.1 Purpose.....	1
1.2 Scope.....	1
2 Safety Instructions.....	1
3 Introduction.....	2
3.1 Features.....	2
3.2 Basic System Architecture.....	2
3.3 Product Overview.....	3
4 Installation.....	6
4.1 Unpacking And Inspection	6
4.2 Preparation	6
4.3 Mounting The Unit.....	6
4.4 Battery Connection.....	7
4.5 Ac Input/Output Connection.....	8
4.6 PV Connection.....	9
4.7 Final Assembly.....	10
4.8 Communication Connection	11
5 Operation.....	11
5.1 Power On/off.....	11
5.2 Operation and Display Pane	12
5.3 LCD Stting.....	19
5.4 Battery Equalization Description.....	26
5.5 Fantion and alarm descripion.....	28
6 Trouble removeal.....	30
7 Technical datasheet.....	31
Appendix I:Parallel function.....	32
1 Introduction.....	32
2 PackContents.....	32
3 Parallel board installation.....	32
4 Mounting the Unit.....	34
5 Wiring Connection.....	34
6 PV Connection.....	44
7 LCD Setting and Display.....	45
8 Commissioning.....	46

 7.LCD Setting and Display


Setting Program:

Program	Description	Selectable option	
04	AC output mode *This setting is only available when the inverter is in standby mode (Switch off).	Single: 	When the units are used in parallel with single phase, please select "PAL" in program 4.
		Parallel: 	It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four inverters in one phase please-2 for detailed information. Please select "3P1" in program 4 for the inverters connected to phase, "3P2" in program 4 for the inverters connected to L2 phase and "3P3" in program 4 for the inverters connected to L3 phase.
		L1 phase: 	
		L2 phase: 	
		L3 phase: 	Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases. Besides, power saving function will be automatically disabled.

Fault code display


Fault Code	Fault Event	Icon on
60	Power feedback protection	
71	Firmware version inconsistent	
72	Current sharing fault	
80	CAN fault	
81	Host loss	
82	Synchronization loss	
83	Battery voltage detected different	
84	AC input voltage and frequency detected different	
85	AC output current unbalance	
86	AC output mode setting is different	

Communication Connection

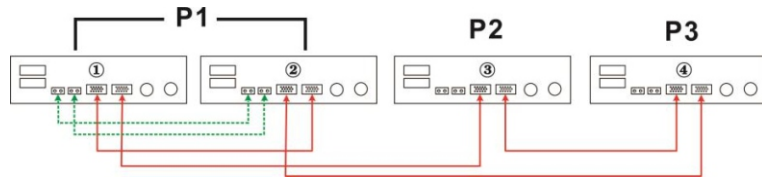


One inverter in each phase:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

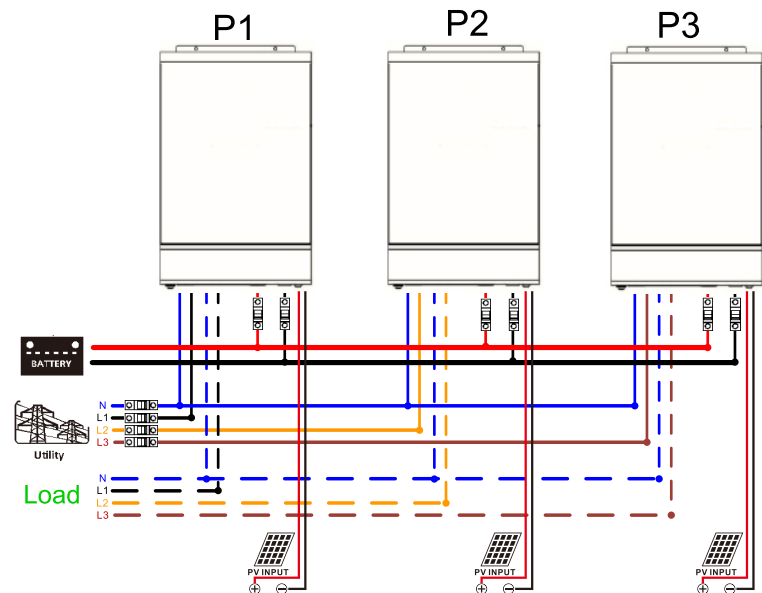

Communication Connection

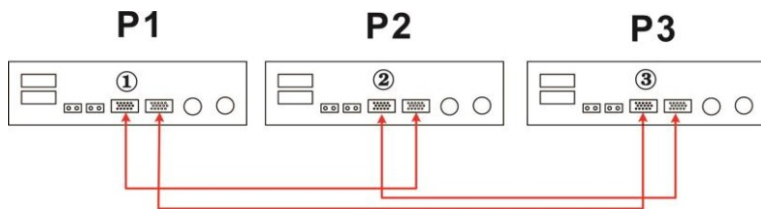

WARNING: Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

6. PV Connection

Please refer to user manual of single unit for PV Connection

CAUTION: Each inverter should connect to PV modules separately.

1 About This Manual

1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations, Keep manual for future reference.

1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

2 Safety Instructions

WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION-**To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION-**Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals, Please refer to INSTALLATION section of this manual for the details
10. One piece of 150A fuse is provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/ charger should be connected to a permanent grounder wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

3 Introduction

This is a multi-function Inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

3.1 Features

- ◆ Pure sine wave inverter
- ◆ Configurable input voltage range for home appliances and personal computers via LCD setting
- ◆ Configurable battery charging current based on applications via LCD setting
- ◆ Configurable AC/Solar Charger priority via LCD setting
- ◆ Compatible to mains voltage or generator power
- ◆ Auto restart while AC is recovering
- ◆ Overload/Over temperature/short circuit protection
- ◆ Smart battery charger design for optimized battery performance
- ◆ Cold start function


3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- ◆ Generator or Utility
- ◆ PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

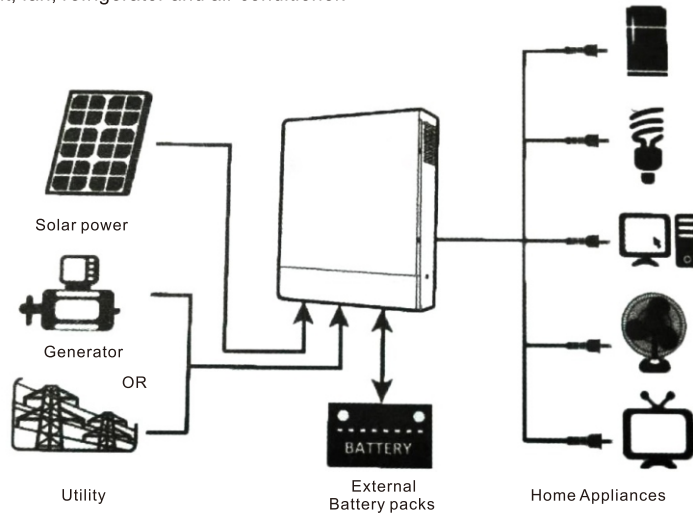


Communication Connection

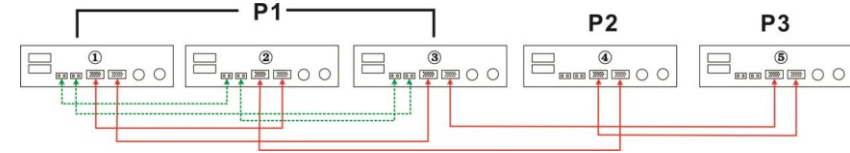


Two inverters in two phases and only one inverter for the remaining phase:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

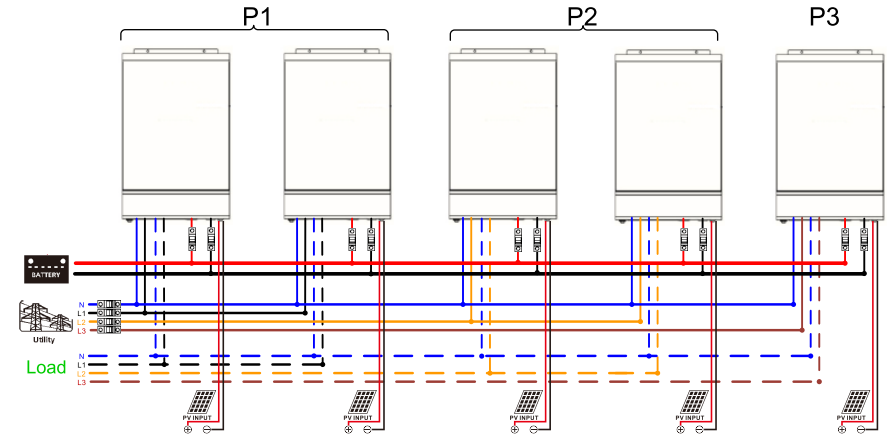


Communication Connection

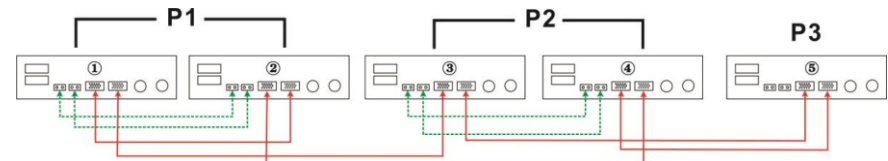


Two inverters in one phase and only one inverter for the remaining phases:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

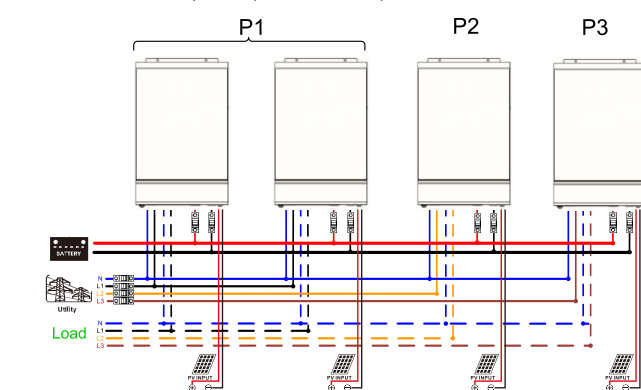


Communication Connection

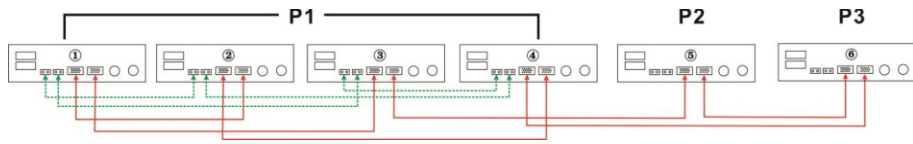


Three inverters in one phase, two inverters in second phase and one inverter for the third phase:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

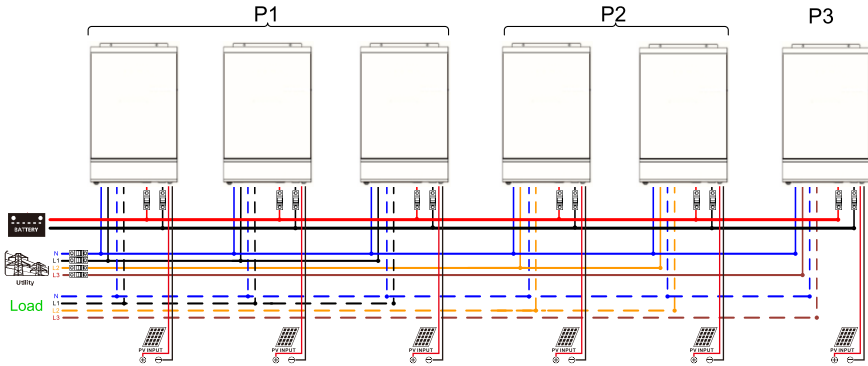


Communication Connection

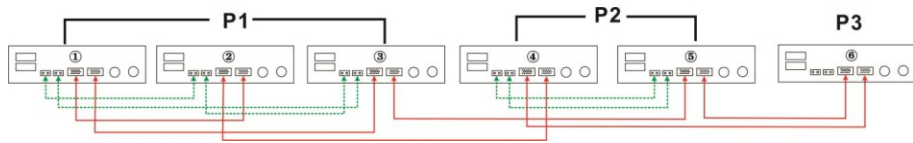


Three inverters in one phase and only one inverter for the remaining two phases:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

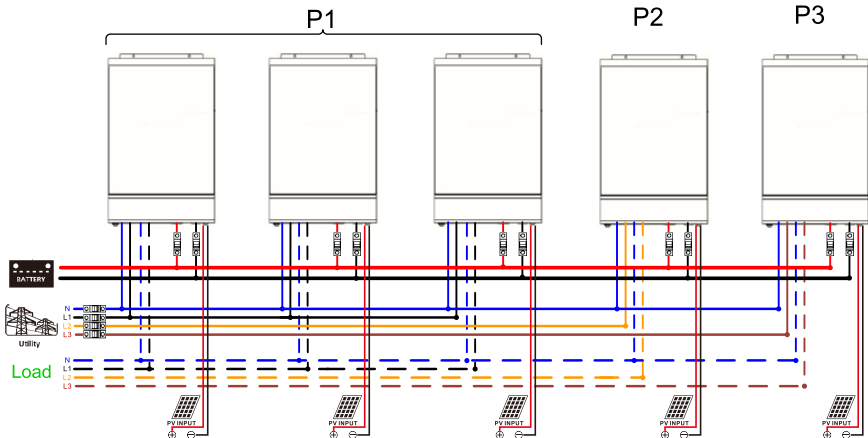


3.3 Product Overview


3.3.1 LCD Screen

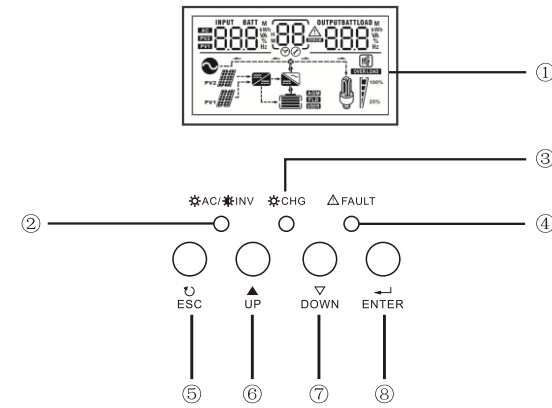


- | | |
|--------------------------|-------------|
| 1.....LCD display | 5.....ESC |
| 2.....Status indicator | 6.....UP |
| 3.....Charging indicator | 7.....DOWN |
| 4.....Fault indicator | 8.....ENTER |

3.3.2 Back Panel

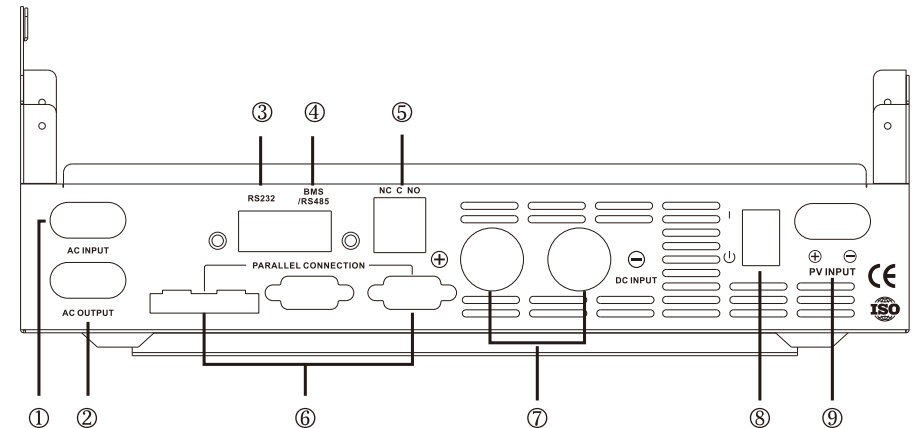

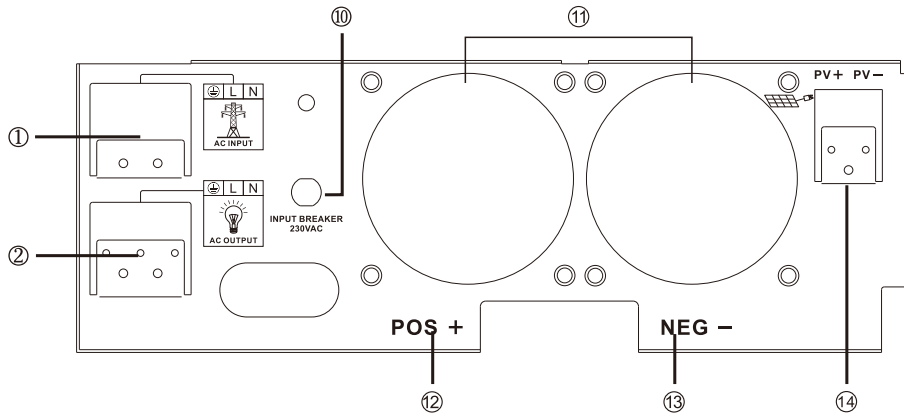


Dual Output Back Panel

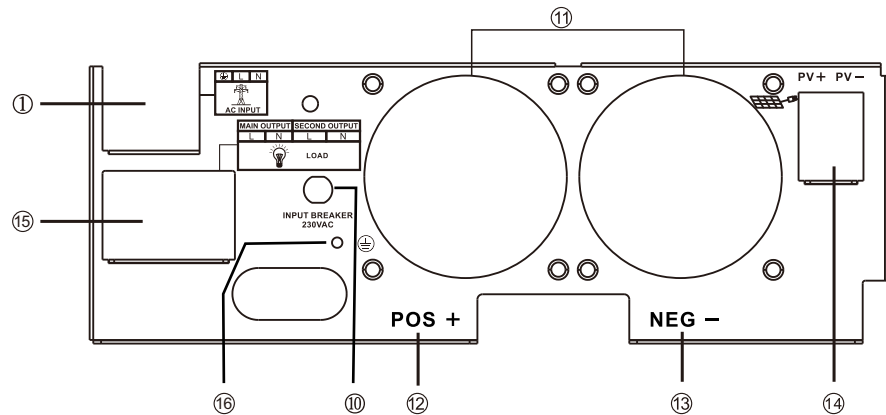

3KVA-6.2KVA


- | | |
|------------------------------------|--------------------------------|
| 1..... AC Input | 9.....PV Input |
| 2..... AC Output | 10...Input Breaker |
| 3.....Communication Port | 11...Fan |
| 4.....BMS/RS485 Communication Port | 12...Battery Terminal Positive |
| 5.....Dry Contact | 13...Battery Terminal Negative |
| 6.....Parallel connection | 14...Solar Panel Input |
| 7.....Battery Input | 15...AC Main/Second Output |
| 8.....Power ON/ OFF Switch | 16...Output ground wire |

 Communication Connection




Two inverters in each phase:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

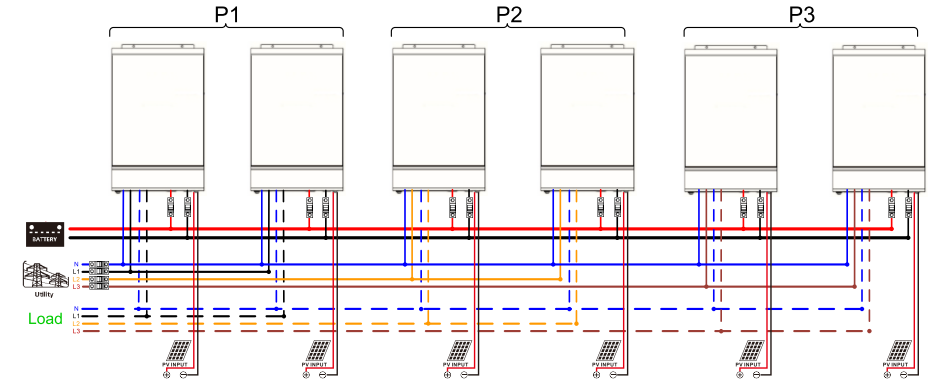


Communication Connection

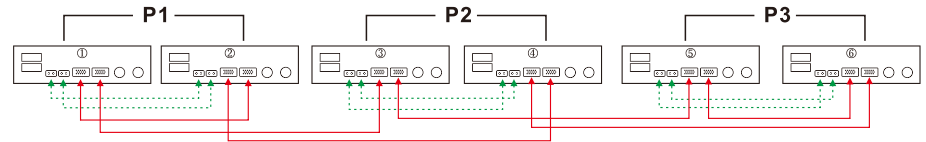


Four inverters in one phase and one inverter for the other two phases:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

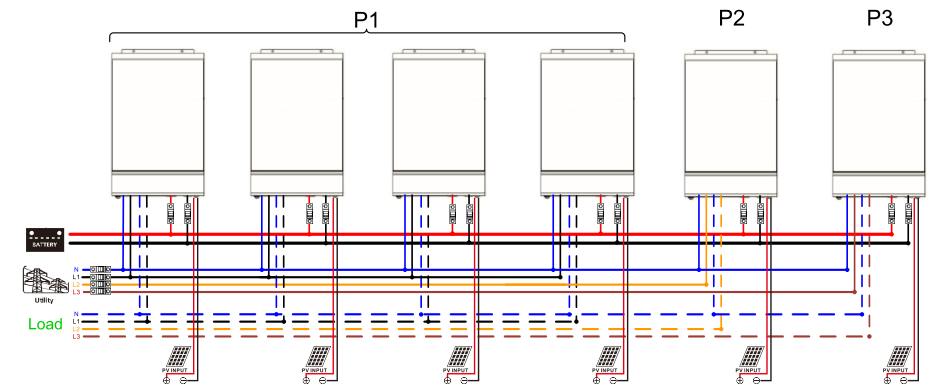


Communication Connection

 


Three inverters in one phase, three inverters in second phase and two inverters for the third phase:
(Only for 5KVA/5.5KVA/6.2KVA)

Power Connection(Each photovoltaic panel needs to be connected to an independent system)



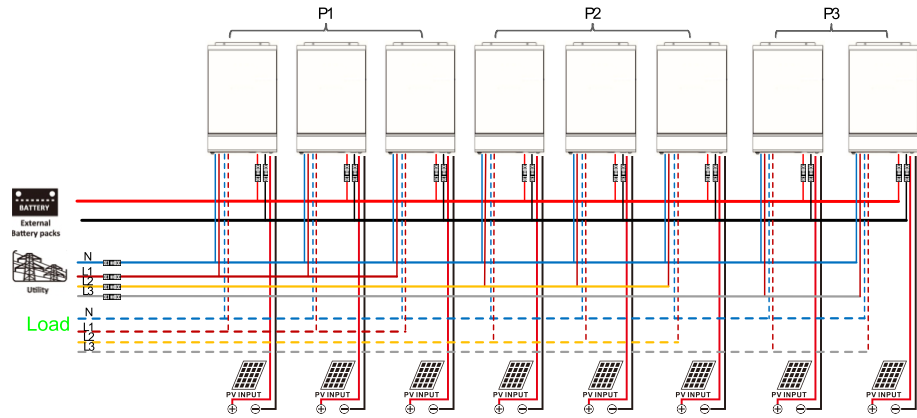


Communication Connection

 


Three inverters in one phase, two inverters in second phase and two inverters for the third phase:
(Only for 5KVA/5.5KVA/6.2KVA)

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

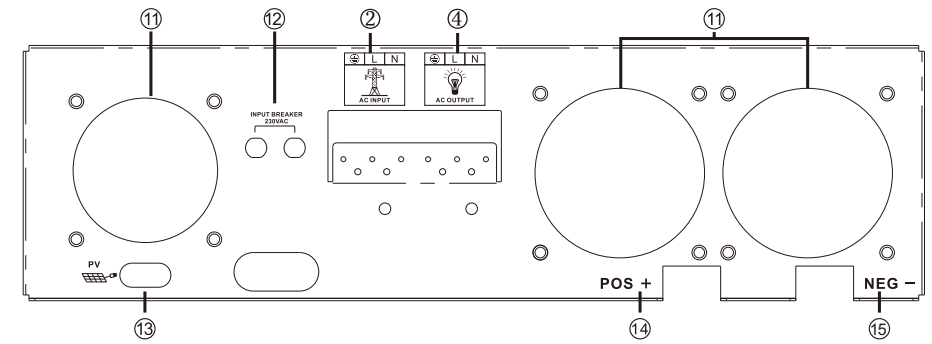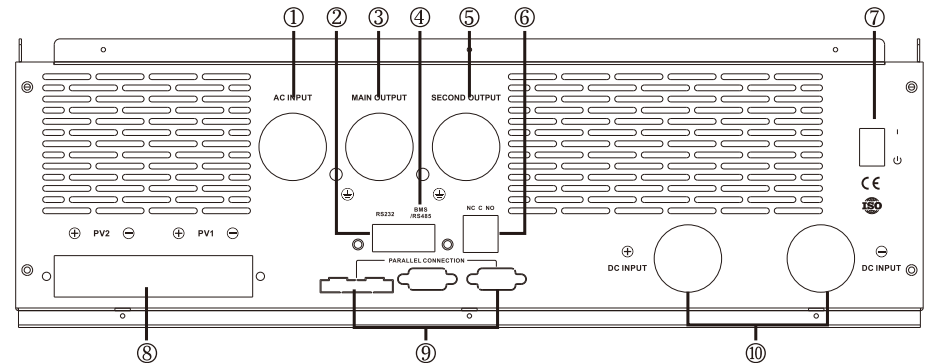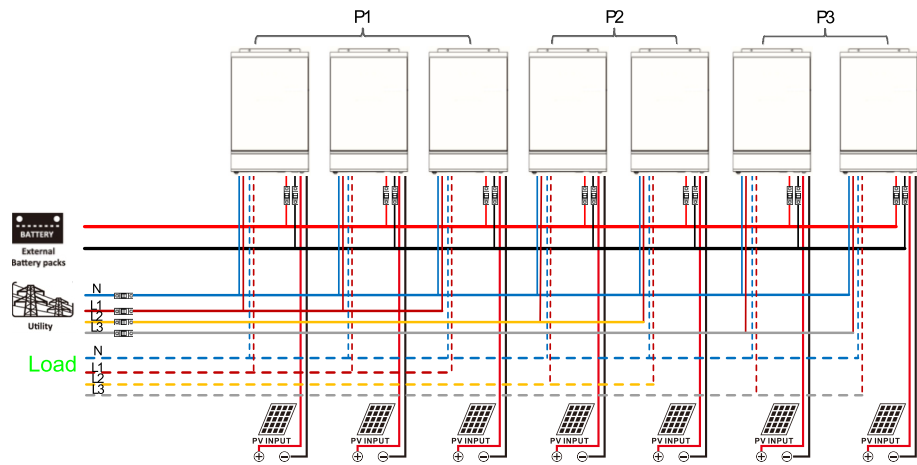

Dual Output Back Panel

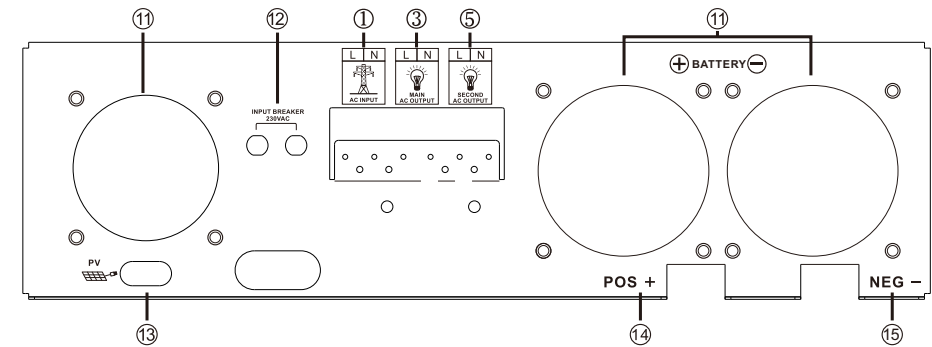

8KVA-11KVA

- 1.....AC Input
- 2.....RS232 Communication Port
- 3.....Main output
- 4.....BMS/RS485 Communication Port
- 5.....Second Output
- 6.....Dry Contact
- 7.....Power ON/OFF Switch
- 8.....Solar Panel Input
- 9.....Parallel connection
- 10...Battery Input
- 11...Fan
- 12...Input Breaker
- 13...PV Input
- 14...Battery Terminal Positive
- 15...Battery Terminal Negative

4 INSTALLATION


4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ◆ The unit x 1
- ◆ User manual 1

4.2 Preparation


Before connecting all please take off bottom cover by removing two screws as shown below.

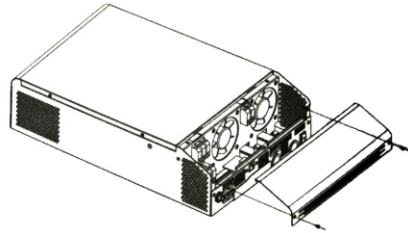

4.3 Mounting the Unit

Consider the following points before selecting where to install:

- ※ Do not mount the inverter on flammable construction materials.
- ※ Mount on a solid surface
- ※ Install this inverter at eye level in order to allow the LCD display to be read at all times.
- ※ For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- ※ The ambient temperature should be between and to ensure optimal operation.
- ※ The recommended installation position is to be adhered to the wall vertically.
- ※ Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

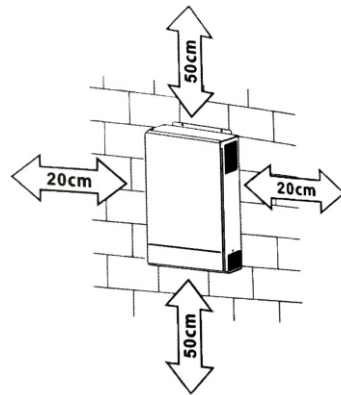


! SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing three screws.

- 1,2 Use the M6*80mm expansion bolts.
- 3 Use M4 or M5.




 Communication Connection




Seven to nine inverters in parallel: **(Only for 5KVA/5.5KVA/6.2KVA)**

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

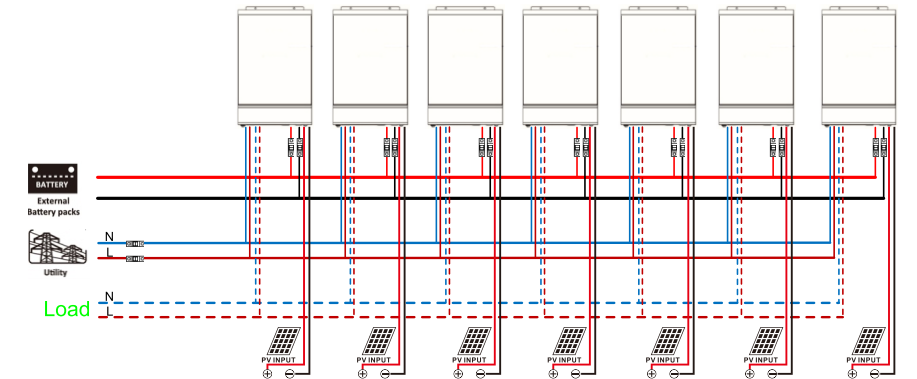


Communication Connection

 ⌚ Seven inverters in parallel



⌚ Eight inverters in parallel

 


⌚ Nine inverters in parallel




5-2. Support 3-phase equipment

Three inverters in each phase: **(Only for 5KVA/5.5KVA/6.2KVA)**

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

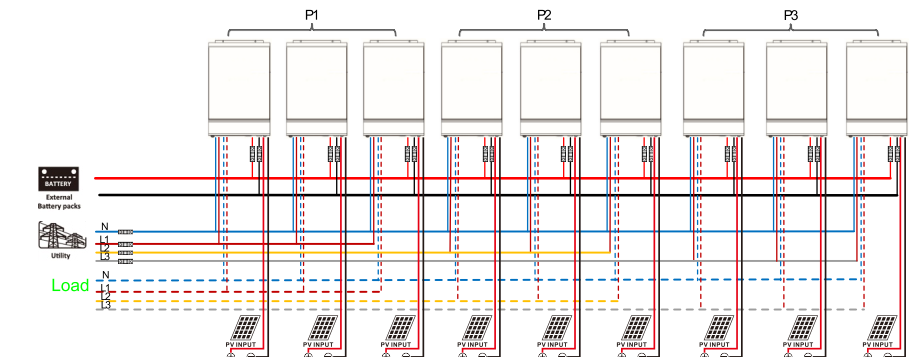


Communication Connection

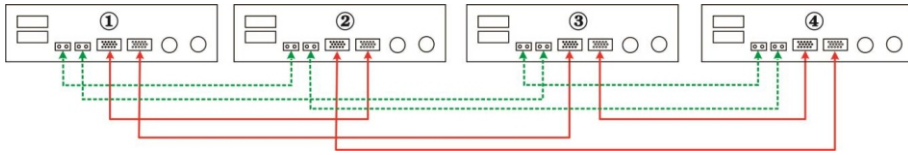


Five inverters in parallel:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

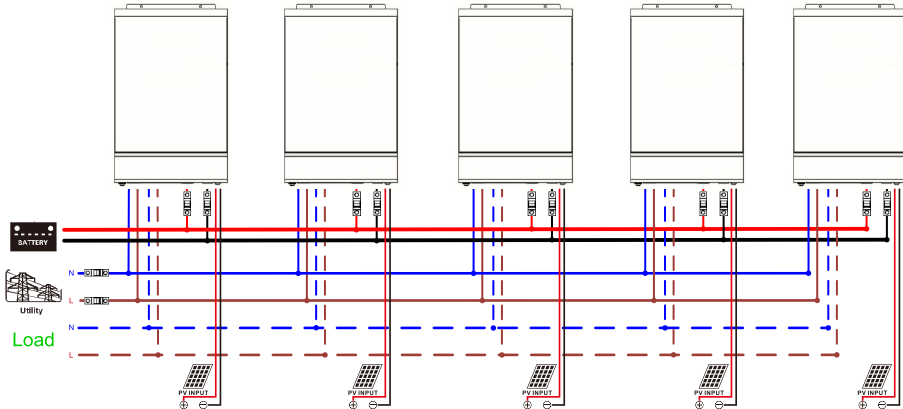


Communication Connection

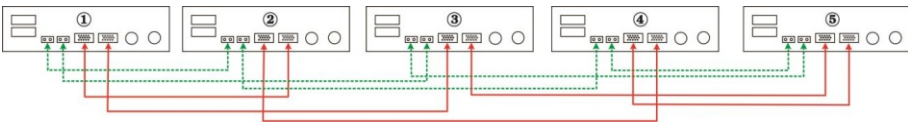

Six inverters in parallel:


Power Connection(Each photovoltaic panel needs to be connected to an independent system)

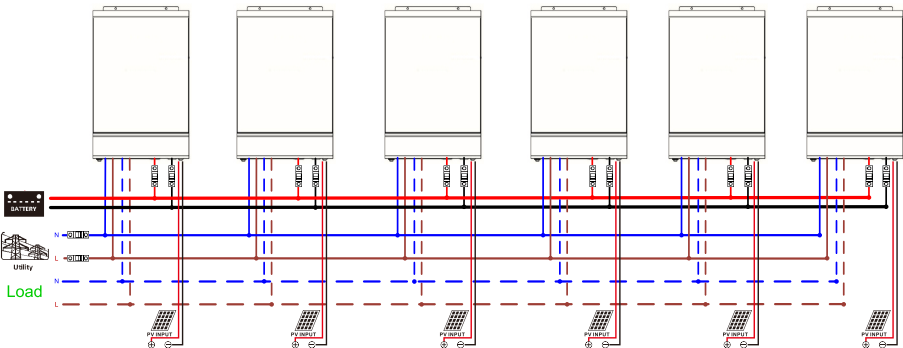

4.4 Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

 Ring terminal:




WARNING! All wiring must be performed by qualified personnel.
WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Recommended battery cable and terminal size:


Model	Typical Amperage	Battery capacity	Wire Size	Cable(mm ²)	Ring Terminal Dimensions		Torque value
					D(mm)	L(mm)	
TEX2KP	88A	100AH	1*6AWG	14	6.4	33.2	2~3 Nm
			2*10AWG	6	6.4	23.8	
TEX3K	132A	100AH	1*4AWG	22	6.4	33.2	2~3 Nm
		200AH	2*8AWG	9	6.4	29.2	
TEX3.6K	165A	200AH	2*4AWG	25	8.4	33.2	5Nm
TEX5K	109A	200AH	1*2AWG	38	6.4	39.2	2~3 Nm
			2*6AWG	28	6.4	33.2	
TEX5.5K	121A	200AH	1*2AWG	34	6.4	39.2	2~3 Nm
			2*6AWG	14	6.4	33.2	
TEX6.2KB	124A	200AH	1*2AWG	38	8.4	39.2	5Nm
TEX8K	183.2A	250AH	1*2/0AWG	67.4	8.4	51	5Nm
MAX11KB	228A	250AH	1*3/0AWG	85	8.4	54	5Nm

please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.

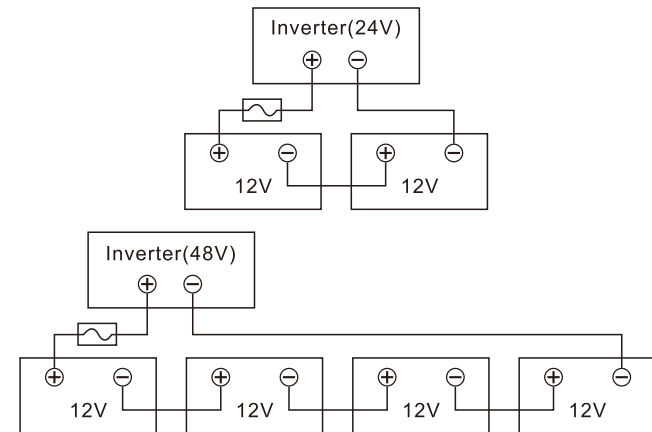

2. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals. Recommended tool: # 2 Pozzi Screwdriver

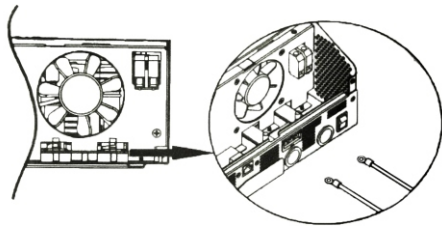

	WARNING: Shock Hazard Installation must be performed with care due to high battery voltage in series.
	CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive(+) must be connected to positive(+) and negative(-) must be connected to negative (-).

4.5 AC Input Output Connection

CAUTION!! Before connecting to AC input power source, please Install a separate AC breaker between inverter and AC input power source. This will ensure the Inverter can be disconnected during maintenance and fully protected from over current of AC input. The recommended spec of breaker is 32A for 3 KW and 50A for 5 KW.

CAUTION!! There are two terminal blocks with " IN " and " OUT " markings. Please do NOT misconnect input and output connectors.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires


Model	Gauge	Torque value
TEX2KP	14AWG	08~1.0Nm
TEX3K	12AWG	1.2~1.6Nm
TEX3.6K	12AWG	1.2~1.6Nm
TEX5K	10AWG	1.4~1.6Nm
TEX5.5K	10AWG </td <td>1.4~1.6Nm</td>	1.4~1.6Nm
TEX6.2KB	10AWG	1.4~1.6Nm
TEX8K	8AWG	1.4~1.6Nm
MAX11KB	8AWG	1.4~1.6Nm

Please follow below steps to implement AC input/ output connection


1. Before making AC input/output connection be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N3 mm.

Three inverters in parallel:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

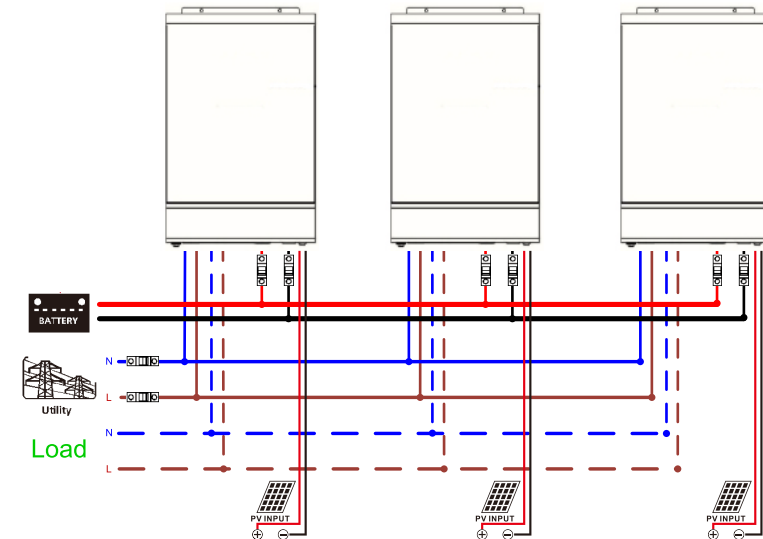


Communication Connection

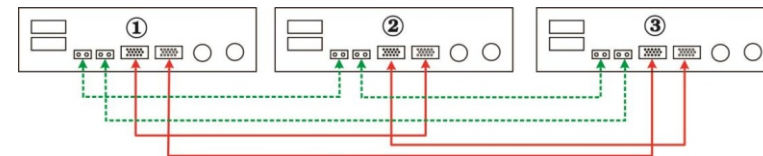

Four inverters in parallel:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

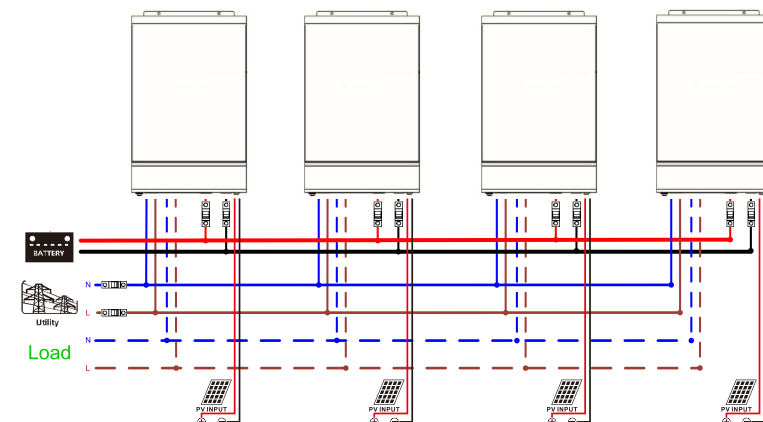

Recommended battery capacity


Inverter parallel numbers	2	3	4	5	6	7	8	9
Battery Capacity for TEX3K	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for TEX3.6K	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for TEX5K	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for TEX5.5K	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for TEX6.2KB	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for TEX8K	400AH	600AH	800AH	1000AH	1200AH	/	/	/
Battery Capacity for MAX11KB	500AH	750AH	1000AH	1250AH	1500AH	/	/	/

WARNING! Be sure that all inverters will share the same battery bank . Otherwise, the inverters will transfer to fault mode.


5-1. Parallel Operation in Single phase

Two inverters in parallel:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

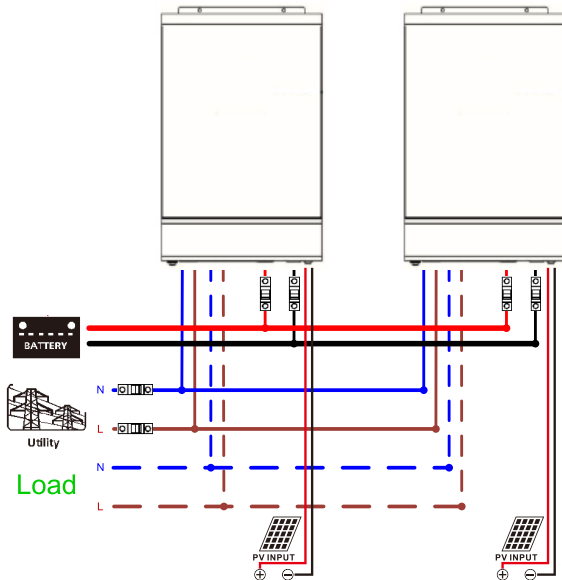

Communication Connection

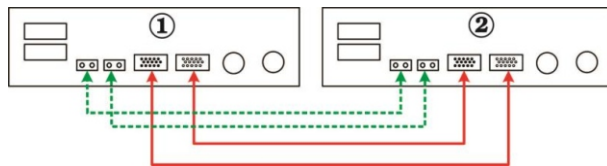


3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor(⊕)first.

⊕→Ground(yellow-green)

L→LINE(brown or black)

N→Neutral (blue)

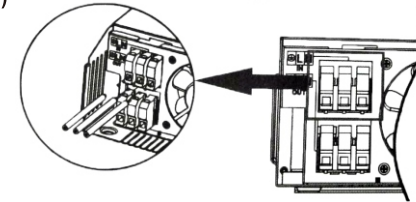

WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/ charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

4.6 PV Connection

PV Connection(Only apply for the model with solar charger)

CAUTION:Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Typical Amperage	Gauge	Torque Value
30A	12AWG	1.4~1.6Nm

PV module selection:

When choosing the right PV module, be sure to first consider the following requirements:



The open circuit voltage (Voc) of the PV modules does not exceed the maximum PV array open circuit voltage of the inverter. The maximum supply voltage of the PV modules should be close to the optimal PV access voltage range of the inverter for best performance. If one PV module cannot meet this requirement, it is necessary to connect multiple PV modules in series.

Model	TEX2KP	TEX3KM	TEX3.5KM	TEX3K	TEX3.6K	TEX5K	TEX5.5K	TEX6.2KB	TEX8K	MAX11KB
PV Charging Mode	PWM	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT Dual MPPT	MPPT Dual MPPT
MAX.PV Input Power	1200W	1500W	1500W	5000W	5000W	6200W	6200W	6200W	2*5500W	2*5500W
MPPT Tracking Range	N/A	30~145 Vdc	30~145 Vdc	60~500 Vdc	60~500 Vdc	60~500 Vdc	60~500 Vdc	60~500 Vdc	90~500 Vdc	90~500 Vdc
Best voltage	30~32V	30~115V	30~115V	300~400V	300~400V	300~400V	300~400V	300~400V	300~400V	300~400V
MAX.PV Input Voltage	80Vdc	150Vdc	145Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc
MAX.PV Charging Current	50A	60A	60A	100A	120A	100A	100A	120A	150A	150A
MAX.AC Charging Current	50A	60A	60A	60A	100A	60A	60A	100A	120A	150A
MAX.Charging Current	100A	120A	120A	100A	120A	100A	100A	120A	150A	150A

PV Module Wire Connection

Please follow below steps to implement PV module connection:


1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool
3. Fix wire cover to the inverter with supplied screws as shown in below chart.

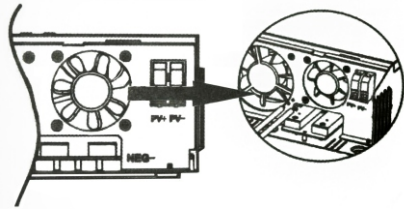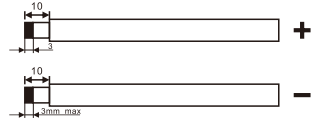

4. Check correct polarity of wire from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

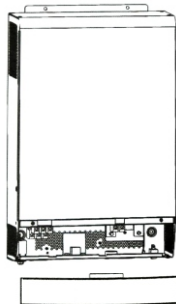

Recommended AC input and output cable size for each inverter:

Model	AWG no.	Torque
TEX3K	12AWG	1.2~1.6Nm
TEX3.6K	12AWG	1.2~1.6Nm
TEX5K	10AWG	1.2~1.6Nm
TEX5.5K	10AWG	1.2~1.6Nm
TEX6.2KB	10AWG	1.2~1.6Nm
TEX8K	8AWG	1.4~1.6Nm
MAX11KB	8AWG	1.4~1.6Nm

You need to connect the cables of each inverter together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. indicates the number of inverters connected in parallel.

Regarding AC input and output, please also follow the same principle.

WARNING!! Make sure all output N wires of each inverter must be connected all the time. Otherwise, it will cause inverter fault in error code #72.

CAUTION!! Please install the breaker at the battery and AC input side. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5- 1 and 5-2.

Recommended breaker specification of battery for each inverter:

Model	1 unit*	Model	1 unit*
TEX3K	150A/70VDC	TEX6.2KB	150A/70VDC
TEX3.6K	200A/70VDC	TEX8K	300A/70VDC
TEX5K	150A/70VDC	MAX11KB	300A/70VDC
TEX5.5K	150A/70VDC		

*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit." X " indicates the number of inverters connected in parallel.


Recommended breaker specification of AC input with single phase:

Model	2 units	3 units	4 units	5 units	6 units	7 units	8 units	9 units
TEX3K	80A/ 230VAC	120A/ 230VAC	160A/ 230VAC	200A/ 230VAC	240A/ 230VAC	280A/ 230VAC	320A/ 230VAC	360A/ 230VAC
TEX3.6K	80A/ 230VAC	120A/ 230VAC	160A/ 230VAC	200A/ 230VAC	240A/ 230VAC	280A/ 230VAC	320A/ 230VAC	360A/ 230VAC
TEX5K	80A/ 230VAC	120A/ 230VAC	160A/ 230VAC	200A/ 230VAC	240A/ 230VAC	280A/ 230VAC	320A/ 230VAC	360A/ 230VAC
TEX5.5K	80A/ 230VAC	120A/ 230VAC	160A/ 230VAC	200A/ 230VAC	240A/ 230VAC	280A/ 230VAC	320A/ 230VAC	360A/ 230VAC
TEX6.2KB	80A/ 230VAC	120A/ 230VAC	160A/ 230VAC	200A/ 230VAC	240A/ 230VAC	280A/ 230VAC	320A/ 230VAC	360A/ 230VAC
TEX8K	120A/ 230VAC	180A/ 230VAC	240A/ 230VAC	300A/ 230VAC	360A/ 230VAC	/	/	/
MAX11KB	120A/ 230VAC	180A/ 230VAC	240A/ 230VAC	300A/ 230VAC	360A/ 230VAC	/	/	/

Note1: Also, you can use 40A breaker for 2KW and 50A for 3KW/5KW for only 1 unit and install one breaker at its AC input in each inverter.

Note2: Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units


Step7: Put communication board back to the unit.

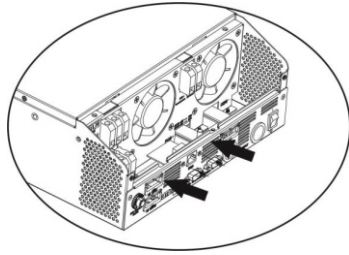

Step8: Put wire cover back to the unit. Now the inverter is providing parallel operation function.

4. Mounting the Unit

When installing multiple units, please follow below chart.

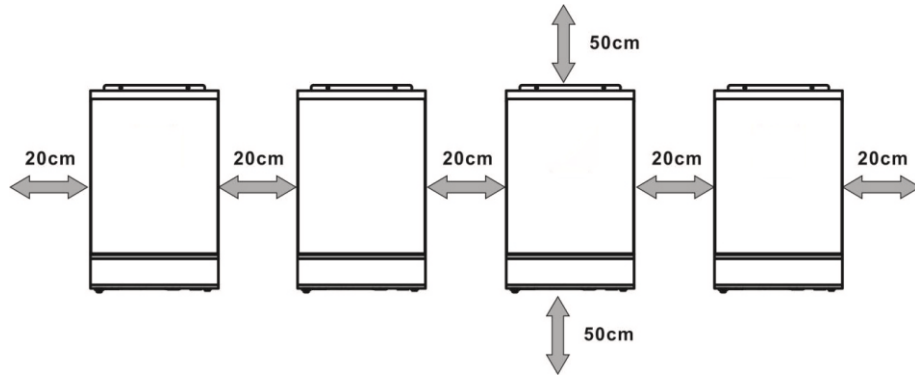

NOTE: For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx.50 cm above and below the unit, Be sure to install each unit in the same level.

5. Wiring Connection


NOTICE: It's requested to connect to battery for parallel operation.

The cable size of each inverter is shown as below:

Recommended battery cable and terminal size for each inverter:

Model	Wire Size	Ring Terminal			Torque value
		Cable mm ²	D (mm)	L (mm)	
TEX3K	1*4AWG	22	6.4	33.2	2~3Nm
TEX3.6K	2*4AWG	25	8.4	33.2	5Nm
TEX5K	1*2AWG	38	6.4	33.2	2~3Nm
TEX5.5K	1*2AWG	38	6.4	39.2	2~3Nm
TEX6.2KB	1*2AWG	38	8.4	39.2	2~3Nm
TEX8K	1*2/0AWG	67.4	8.4	51	5Nm
MAX11KB	1*3/0AWG	85	8.4	54	5Nm

Ring terminal:

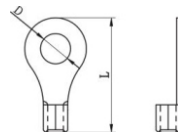

WARNING: Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.

4.8 Communication Connection

1. Please use supplied communication cable to connect to inverter and PC. Insert bundled CD into a compute and follow on-screen instruction to install the monitoring software. For the detailed software operation. please check user manual of software inside of CD.

2. Wi-Fi cloud communication(option):


please use supplied communication cable to connect to inverter and Wi-Fi module. Download APP and installed from APP store, and Refer to "Wi-Fi Plug Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

3. GPRS cloud communication(option):

please use supplied communication cable to connect to inverter and GPRS module, and then applied external to GPRS module. Download APP and installed from APP store, and Refer to " GPRS RTU Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

5 OPERATION

5.1 Power ON/OFF

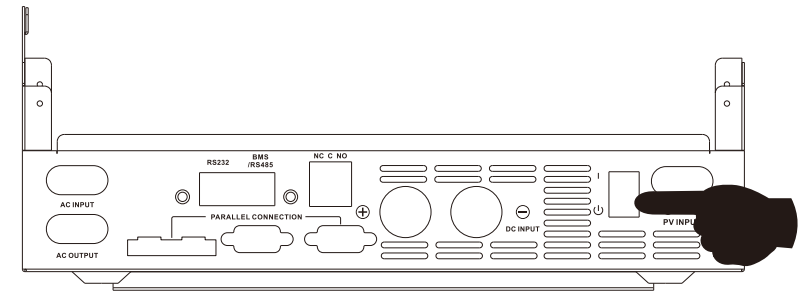

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case)to turn on the unit.

5.1.1 Steps to start up

Connect the battery that meets the requirements (battery voltage needs to beyond 23V) or AC (AC needs to confirm the suitable input range depend on the output mode), then you can start up the inverter.

➤ Mains power on

Connect to normal AC power, press the switch, the system will automatically turn on. If you set AC output power priority, after waiting for a period of time, the panel will display AC mode that represents turn on the machine successfully, then will enter the AC mode.

When the normal mains power is connected and press the power-on button then the system will automatically power on. If it is set as AC output priority, after a period of time, the panel will display the AC mode to indicate that the power-on is complete and enter the AC mode.

➤ Battery boot

Connect to battery, press the power-on button to establish a working power source.

The system will automatically turn on, after waiting for a period of time, the panel will display battery mode that represents turn on the machine successfully, then will enter the battery mode.

5.1.2 Shutdown steps

 
When the system is in battery mode or AC mode output, press the switch again, then the system will be turned off.

5.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.



LCD display



LED indicators

Function keys


LED Indicator

LED Indicator		Messages	
AC/INV	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
CHG	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.


Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode


LCD Display Icons

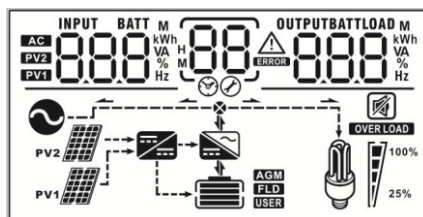


Step 3: Remove two screws as below chart and remove 2-pin and 14-pin cables. Take out the board under the communication board.

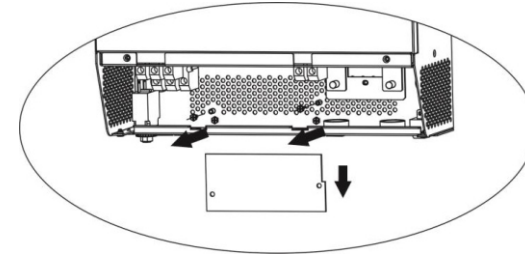

Step 4: Remove two screws as below chart to take out cover of parallel communication.

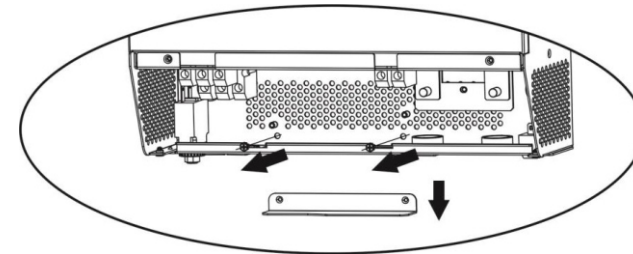



Step 5: Install new parallel board with 2 screws tightly.

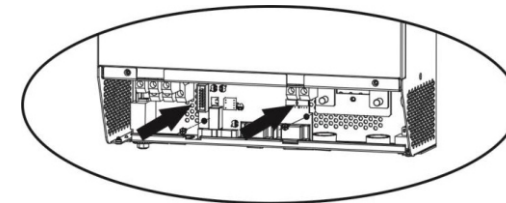

Step 6: Re-connect 2-pin and 14-pin to original position.

Parallel board

Communication board

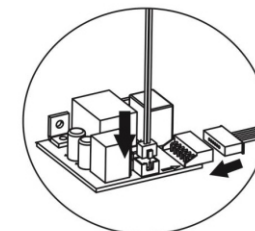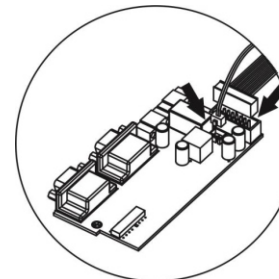

Appendix I: Parallel function

1. Introduction

This inverter can be used in parallel with two different operation modes.

1. Parallel operation in single phase with up to 9 units. The supported maximum output power for 3KW is 27KW/27KVA and for 5KW is 45KW/45KVA.
2. Maximum nine units work together to support three-phase equipment. Seven units support one phase maximum. For 3KW, the supported maximum output power is 27KW/27KVA and one phase can be up to 21KW/21KVA. For 5KW, the supported maximum output power is 45KW/45KVA and one phase can be up to 35KW/35KVA.

NOTE: If this unit is bundled with share current cable and parallel cable, this inverter is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

2. Package Contents

In parallel kit, you will find the following items in the package:



Parallel board




Parallel communication I cable




Current sharing cable

3. Parallel board installation

Step 1: Remove wire cover by unscrewing all screws.

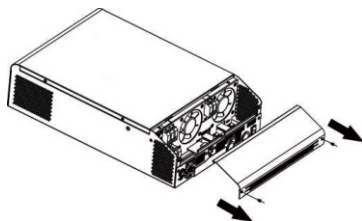

Step 2: Remove communication board by unscrewing two screws as below chart

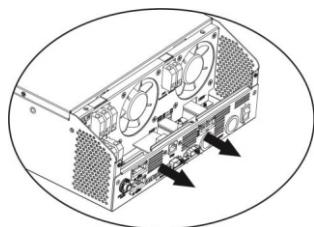

Icon	Function								
Input source information									
	Indicates the AC input								
	Indicates the 1 st PV panel input								
	Indicates the 2 nd PV panel input								
Left digital display information									
	Indicate input voltage, input frequency, battery voltage, V1 voltage, PV2 voltage, charger current								
Middle digital display information									
	Indicates the setting programs.								
	Indicates the warning and fault codes. Warning: Flashing with warning code Fault: display with fault code								
Right digital display information									
	Indicate the output voltage, output frequency, load percent, load VA, load W, PV1 charger power, PV2 charger power, DC discharging current.								
Battery information									
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% and charging status.								
	Indicates the battery type: AGM, Flooded or User-defined battery.								
Load information									
	Indicates overload.								
	Indicates the load level by 0-24%, 25-50%, 50-74%, and 75-100%.								
	<table border="1"> <tr> <td>0%~25%</td> <td>25%~50%</td> <td>50%~75%</td> <td>75%~100%</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table>	0%~25%	25%~50%	50%~75%	75%~100%				
0%~25%	25%~50%	50%~75%	75%~100%						
Mode operation information									
	Indicates unit connects to the mains.								
	Indicates unit connects to the 1 st PV panel								
	Indicates the solar charger is working								
	Indicates the DC/AC inverter circuit is working.								
Mute operation									
	Indicates unit alarm is disabled.								

Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in VA, load in Watt, DO discharging current, main board firmware version and SCC firmware version.


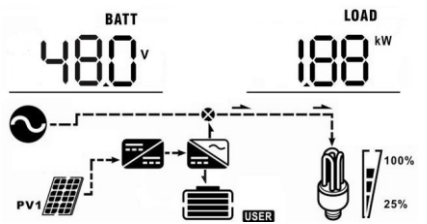
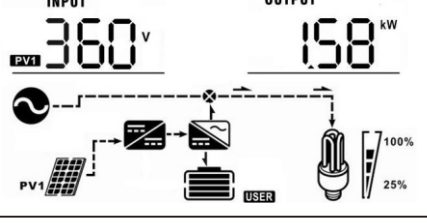
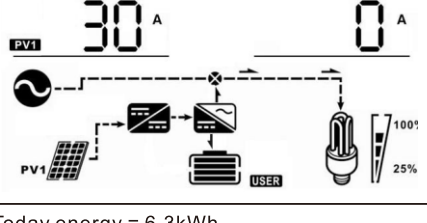
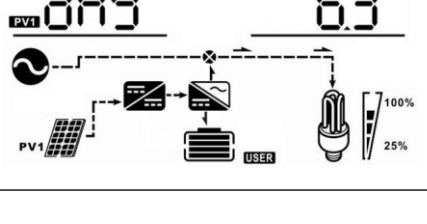
Select item	LCD display
Input voltage and output voltage (Default Display Screen)	Input Voltage=230V, output voltage=230V
Input frequency and output frequency	Input frequency=50.0Hz, output frequency=50.0Hz
Battery voltage and output voltage	Battery Voltage=48.0V, output voltage=230V
Battery voltage and load percentage	Battery Voltage=48.0V, load percentage 68%

7. Technical datasheet

Model	TEX2KP	TEX3KM	TEX3.5KM	TEX3K	TEX3.6K	TEX5K	TEX5.5K	TEX6.2KB	TEX8K	MAX11KB	
Input	Input Sources										
	L+N+PE										
	Rated Input Voltage										
	220/230/240VAC										
Output	Voltage Range										
	90-280VAC±3V(APL Mode)170-280VAC±3V(UPS Mode)										
	Frequency										
	50Hz/60Hz(Auto Adaptive)										
Output	Rated Capacity	2000W	3000W	3500W	3000W	3600W	5000W	5500W	6200W	8000W	11000W
	Output Voltage	220/230/240VAC±5%									
	Output Frequency	50/60Hz±0.1%									
	Waveform	Pure Sine Wave									
	Transfer Time (adjustable)	Computers(UPS Mode)10ms, Appliance(APL Mode)20ms									
	Peak Power	4000VA	6000VA	7000VA	6000VA	7200VA	10000VA	11000VA	12400VA	16000VA	22000VA
	Peak Efficiency (battery Mode)	>93%	>94%	>94%	>94%	>94%	>98%	>98%	>98%	>98%	>98%
Battery	Battery Voltage	24Vdc	24Vdc	24Vdc	24Vdc	24Vdc	48Vdc	48Vdc	48Vdc	48Vdc	48Vdc
	Constant Charging Voltage(Adjustable)	28.2Vdc	28.2Vdc	28.2Vdc	28.2Vdc	28.2Vdc	56.4Vdc	56.4Vdc	56.4Vdc	56.4Vdc	56.4Vdc
	Floate Charging Voltage(Adjustable)	27Vdc	27Vdc	27Vdc	27Vdc	27Vdc	54Vdc	54Vdc	54Vdc	54Vdc	54Vdc
Chargers	PV Charging Mode	PWM	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT	MPPT
	MAX.PV Input Power	1200W	1500W	1500W	5000W	5000W	6200W	6200W	6200W	2*5500W	2*5500W
	MPPT Tracking Range	N/A	30~145Vdc	30~145Vdc	60~500Vdc	60~500Vdc	60~500Vdc	60~500Vdc	60~500Vdc	90~500Vdc	90~500Vdc
	Best voltage	30~32V	30~115V	30~115V	300~400V	300~400V	300~400V	300~400V	300~400V	300~400V	300~400V
	MAX.PV Input Voltage	80Vdc	150Vdc	145Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc
	MAX.PV Charging Current	50A	60A	60A	100A	120A	100A	100A	120A	150A	150A
	MAX.AC Charging Current	50A	60A	60A	60A	100A	60A	60A	100A	120A	150A
MAX.Charging Current	100A	120A	120A	100A	120A	100A	100A	120A	150A	150A	
Display	LCD Display	Display Running Mode/Loads/Input/Output etc.									
Interface	RS232	Baud Rate2400									
	Communication Port	Lithium Battery BMS Communication Card WifiCard, Dry Contact									
	Parallel Connect Interface	Without Parallel Connect					With Parallel				
Environments	Operating Temperature	-10~50°C									
	Humidity	20%~95%(Non-condensing)									
	Storage Temperature	-15~60°C									
	Altitude	Altitude Not Over 1000m,Derating over 1000m,Max 4000m. Refer to IEC62040									
Noise	≤50db										

6. Trouble removal

Problem	LCD/LED/Buzzer	Explanation/Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication	1. The battery voltage is far too low.(<1.4V/Cell) 2. Internal fuse tripped.	1.Contact repair center for replacing the fuse. 2. Re-charge battery. 3. Replace battery. Check if AC breaker is tripped and AC wiring is connected well.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied)is working well or if input voltage range setting is correct.(UP-->sppliance)
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	Change output source priority to Utility first.
	Green LED is flashing.	Set "Solar First" as the priority of output source.	
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 105% and time is up.	Reduce the connected load by switching off some equipment.
		If PV input voltage is higher than specification, the output power will be derated.At this time, if connected loads is higher than derated output power, it will cause overload.	Reduce the number of PV modules in series or the connected load.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C	Return to repair center.
	Fault code 03	Battery is over-charged	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
Fault code 52	Bus voltage is too low.		
Fault code 55	Output voltage is unbalanced.		
Fault code 59	PV input voltage is beyond the specification.	Reduce the number of PV modules in series.	

Battery voltage and load in VA	Battery Voltage=48.0V, load in VA=1.08kVA 
Battery voltage and load in Watt	Battery Voltage=48.0V, load in Watt=1.88kW 
PV1 voltage and PV1 charger power	PV1 Voltage=360V, charging power=1.58kW 
Charger current and DC discharging current	Charging current=30A, discharging current=0A 
PV energy generated today	Today energy = 6.3kWh 

PV energy generated this month	<p>This month energy = 358kWh.</p>
PV energy generated this year	<p>This year energy = 8.32MWh</p>
PV energy generated totally	<p>Total energy = 13.9MWh</p>
Real date	<p>Real date Nov 28, 2016.</p>
Real time	<p>Real time 13: 20.</p>

5.5.2 Warning Descriptions

➤ **Alarm:** The red LED flashes, and the LCD displays an alarm code, the inverter does not enter the failure mode

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
02	Over temperature	None	
03	Battery is over-charged	Beep once every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
15	PV energy is low.	Beep twice every 3 seconds	
16	High AC input (>280VAC) during BUS soft start	None	
E9	Battery equalization	None	
bP	Battery is not connected	None	

5.5.3 Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

Code	Description
60 ⚠	If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.
61 ⚠	Communication lost <ul style="list-style-type: none"> After battery is connected, communication signal is not detected for 3 minutes, buzzer will beep. After 10 minutes, inverter will stop charging and discharging to lithium battery. Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.
69 ⚠	If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.
70 ⚠	If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.
71 ⚠	If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharge battery.


5.5 Fansion and alarm description

5.5.1 Faults Descriptions

➤ **Fault:** The inverter enters the fault mode, the red LED light is always on and the LCD displays the fault code.


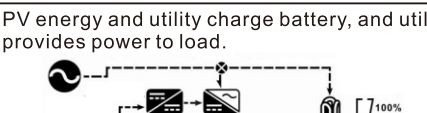
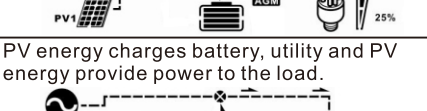
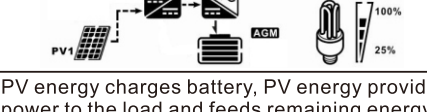

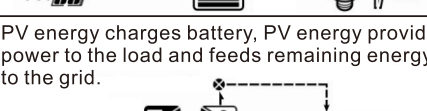
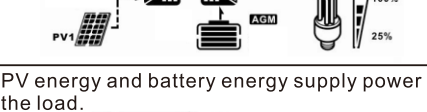
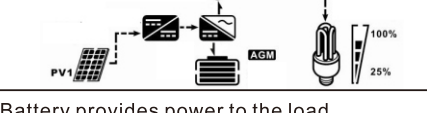
Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature or NTC is not connected well.	
03	Battery voltage is too high.	
04	Battery voltage is too low.	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Over load time out.	
08	Bus voltage is too high	
09	Bus soft start failed	
51	Over currents or surge	
52	Bus voltage is too low	
53	Inverter soft start failed	
55	Over DC voltage in AC output	
57	Current sensor failed	
58	Output voltage is too low	
59	PV voltage is over limitation	

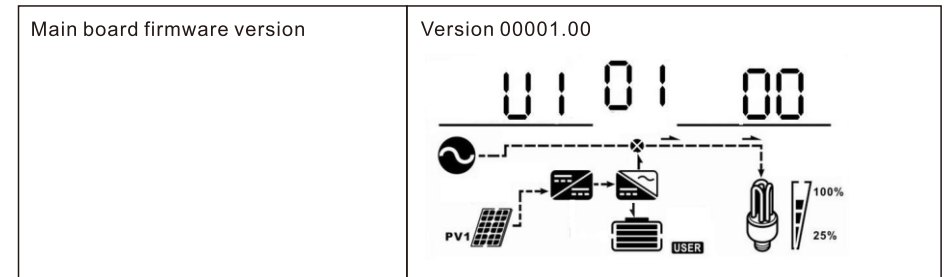


Operating Mode Description

Operating mode	Behaviors	LCD display
Standby mode Note: *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. *Power swing mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.	No output power, solar or utility charger available	Battery is charged by utility.
		Battery is charged by PV energy.
		Battery is charged by utility and PV energy.
		Battery is charged by PV energy and feed PV energy grid.
		No charging.
Line mode	Output power from utility. Charger available	Utility charges battery and provides power to load.
		Utility and battery power provide power to load.

Line mode	Output power from utility. Charger available	PV energy, battery power and utility provide power to load. 
	Output power from utility. Charger available	PV energy and utility charge battery, and utility provides power to load. 
		PV energy charges battery, utility and PV energy provide power to the load. 
		PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid. 
Battery mode	Output power from battery or PV	PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid. 
		PV energy and battery energy supply power to the load. 
		Battery provides power to the load. 
Only PV mode	Output power from PV	PV provides power to the load. 


※ **When to Equalize**

In stage, when the setting equalization interval(battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

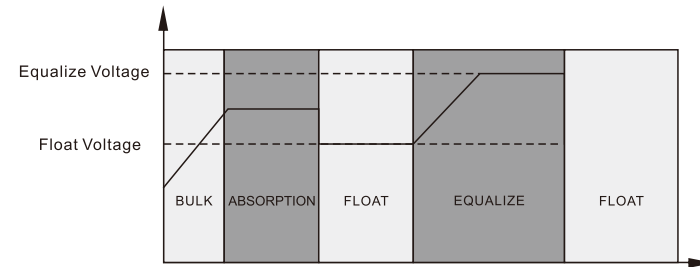


※ **Equalize charging time and timeout**

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

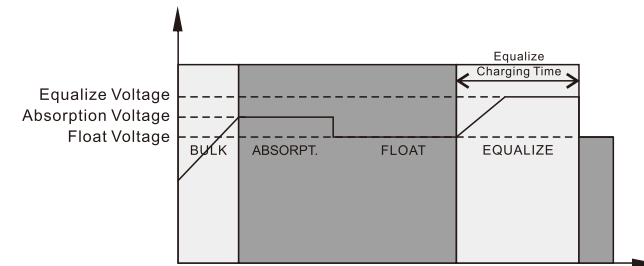


However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

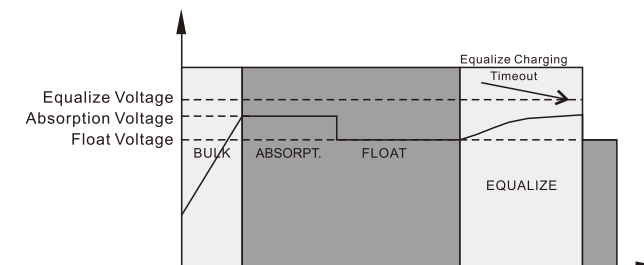

55	Time setting-Year	YER 55 16 For year setting, the range is from 16 to 99.	
56	GRID-tie current	10A 56 10 ^A	Increment of each click is 2A.
60	Dual output	Disable(default) 60 L2F	Use 60 L20
61	Enter the dual output functional voltage point	Default setting:44.0V bUd 61 44.0 ^V	
		Default setting:22.0V bUd 61 22.0 ^V	
		If battery voltage lower than inverter setting, second output will be cutted of, Increment of each click is 0.1V.	
62	Enter the dual output functional SOC point	bSd 62 15 [%]	If BMS capacity lower than SOC setting, second output will be cutted of

When the BMS/485 communication interface is externally connected, as shown in the following figure:

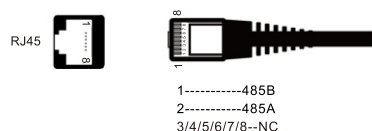

5.4 Battery Equalization Description

Equalization function is added into charge controller, It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

※ How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

- 1.Setting equalization interval in program 35.
- 2.Active equalization immediately in program 36.

5.3 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button exit.

Setting Programs:

Program	Description	Selectable option	
00	Exit setting mode	Escape 00 ESC	
01	Output source priority selection	01 SUB	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.
		01 SBW	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 20 or solar and battery is not sufficient.
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A(default) 02 60 ^A	Setting range is from 10A to 100A. Increment of each click is 10A.
03	AC input voltage range	Appliances (default) 03 APL	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS 03 UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.
05	Battery type	AGM (default) 05 AGM	Flooded
		User-Defined 05 USE	If "User-Defined" is selected, battery charge voltage, low DC cut-off voltage and dual cut -off voltage can be set up in program 26,27,29and 61.

06	Auto restart when overload occurs	Restart disable(default) 06 Lfd	Restart enable 06 LfE
07	Auto restart when over temperature occurs	Restart disable (default) 07 Lfd	Restart enable 07 LfE
08	ECO function: System will temporarily stop when the load is low in battery mode.	disable (default) ECO 08 SdS	
		enable ECO 08 SEN	
09	Output frequency	50Hz(default) 09 50 Hz	60Hz 09 60 Hz
10	Output voltage	220V 10 220v	230V (default) 10 230v
		240V 10 240v	
11	Maximum utility charging current Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger.	30A(default) 11 30A	Setting range is 2A, then from 10A to 60A. Increment of each click is 10A.
12	Setting voltage point back to utility source when selecting "SBU priority" in program 01.	Available options in 3KVA model: 23.0V (default) 12 230v	Setting range is from 22V to 25.5V. Increment of each click is 0.5V.
		Available options in 5KVA model: 46V (default) 12 46v	Setting range is from 44V to 51V. Increment of each click is 1V.
13	Setting voltage point back to battery mode when selecting "SBU priority" in program 01.	Available options in 3KVA model: Battery fully charged 13 FUL	27V(default) 13 270v
		Setting range is from 24V to 29V. Increment of each click is 0.5V.	

47	Stop charging time for AC charger	00: 00(Default) 5:00 47 000 ^{BATT} h	The setting range of scheduled Time for AC output on is from 00: 00 to 23:00, increment of each click is 1 hour.
48	Scheduled time for AC output on	00: 00(Default) 00 48 000 ^{OUTPUT} h	The setting range of scheduled Time for AC output off is from 00: 00 to 23:00, increment of each click is 1 hour.
49	Scheduled time for AC output off	00: 00(Default) OFF 49 000 ^{OUTPUT} h	The setting range of scheduled Time for AC output off is from 00: 00 to 23:00, increment of each click is 1 hour.
50	Set country customized regulations	India(Default) 50 INd	If selected, acceptable feed-in grid voltage range will be 195.5~253VAC. Acceptable feed-in grid frequency range will be 49~51Hz.
		Germany 50 GEn	If selected, acceptable feed-in grid voltage range will be 184~264.5VAC. Acceptable feed-in grid frequency range will be 47.5~51.5Hz.
		South America 50 SAd	If selected, acceptable feed-in grid voltage range will be 184~264.5VAC. Acceptable feed-in grid frequency range will be 57~62Hz.
51	Time setting-Minute	min 51 00	For minute setting, the range is from 00 to 59.
52	Time setting-Hour	HOu 52 00	For hour setting, the range is from 00 to 23.
53	Time setting-Day	DAE 53 01	For day setting, the range is from 00 to 31.
54	Time setting-Month	MON 54 01	For month setting, the range is from 1 to 12

37	BMS Function Switch	off(default) bns 37 OFF	Whether to enable the BMS communication function
		bns 37 ON	
38	Bat Soc Under Lock	bSU 38 ^{BATT} 10%	BMS low voltage SOC value, if the BMS SOC value is lower than the set value, the inverter will shut down to protect the battery.
39	Bat Soc Turn To Ac	StC 39 ^{BATT} 20%	When the working mode of the inverter is set to the battery priority mode, the inverter will be forced to enter the mains charging when the SOC of the BMS is lower than the set value.
40	Bat Soc Turn To Dc	Stb 40 ^{BATT} 95%	When the working mode of the inverter is set to the battery priority mode, the inverter resumes the DC working mode when the SOC of the BMS is higher than the set value.
41	Bat Restart Soc	bSt 41 ^{BATT} 50%	When the inverter is turned on, the SOC must be higher than the set value to work normally.
42	BMS communication protocol	bPO 42 0	Choose RS485 communication protocol
43	Solar supply priority	43 <u>BLU</u>	Solar energy provides power to charge battery as first priority.
		43 <u>LBV</u>	Solar energy provides power to the loads as first priority.
44	Solar energy feed to grid configuration	44 <u>GTd</u>	Solar energy feed to grid disable.
		44 <u>GTe</u>	Solar energy feed to grid enable.
45	Reset PV energy storage	Notre set (Default) 45 <u>PrE</u>	Reset 45 <u>rSt</u>
46	Start charging time for AC charger	00:00(Default) StA 46 ^{BATT} 000 ^h	The setting range of start charging time for AC charger is from 00:00 to 23:00, increment of each click is 1 hour.

		Available options in 5KVA model:	
		Battery fully charged 13 ^{BATT} FUL	54V (default) 13 ^{BATT} 54.0 ^v
		Setting range is from 48V to 58V. Increment of each click is 1V.	
16	Charger source priorit: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Utility first 16 <u>CUT</u>	Utility will charge battery as first priority. Solar energy will charge battery only when utility power is not available.
		Solar first 16 <u>CSO</u>	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility(default) 16 <u>SNU</u>	Solar energy and utility will charge battery at the same time.
		Only Solar 16 <u>OSO</u>	Solar energy will be the only charger source no matter utility is available or not.
		If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
18	Alarm control	Alarm on (default) 18 <u>6ON</u>	Alarm off 18 <u>6OF</u>
19	Auto return to default display screen	Return to default display screen (default) 19 <u>ESP</u>	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 <u>TEP</u>	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 <u>LON</u>	Backlight off 20 <u>LOF</u>
22	Beeps while primary source is interrupted	Alarm on (default) 22 <u>AON</u>	Alarm off 22 <u>AOF</u>

23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 23 BYD	Bypass enable 23 BYE
25	Record Fault code	Record enable (default) 25 FEN	Record disable 25 FDS
26	Bulk charging voltage (C.V voltage)	3KVA default setting: 28.2V CU 26 BATT 28.2V	
		5KVA default setting: 56.4V CU 26 BATT 56.4V	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 25.0V to 31.5V for 3KVA model and 48.0V to 61.0V for 5KVA model. Increment of each click is 0.1V.	
27	Floating charging voltage	3KVA default setting: 27.0V FLU 27 BATT 27.0V	
		5KVA default setting: 54.0V FLU 27 BATT 54.0V	
28	Reset factory setting	default: STd 28 OFF	
		STd 28 ON	
29	Low DC cut-off voltage: • If battery power is only power source available inverter will shut down. • If PV energy and battery power are available, inverter will charge battery without AC output.	If self-defined is selected in program 5, this program can be set up. Setting range is from 21.0V to 24.0V for 3KVA model and 42.0V to 48.0V for 5KVA model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected. COV 29 BATT 21.0V	
		5KVA default setting: 42.0V COV 29 BATT 42.0V	

		If self-defined is selected in program 5, this program can be set up. Setting range is from 21.0V to 24.0V for 3KVA model and 42.0V to 48.0V for 5KVA model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
30	Battery equalization	Battery equalization 30 EEN	Battery equalization disable (default) 30 EDS
		If "Flooded" or "User Defined" is selected in program 05, this program can be set up.	
31	Battery equalization voltage	3KVA default setting: 29.2V EU 31 BATT 29.2V	
		5KVA default setting: 58.4V EU 31 BATT 58.4V	
		Setting range is from 25.0V to 31.5V for 3KVA mode and 48.0V to 61.0V for 5KVA model. Increment of each click is 0.1V.	
33	Battery equalized time	60min (default) 33 60	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default) 34 120	Setting range is from 5min to 900min. Increment of each click is 5min.
35	Equalization interval	30days (default) 35 30d	Setting range is from 0 to 90 days. Increment of each click is 1 day.
36	Equalization activated immediately	Enable 36 AEN	Disable (default) 36 ADS
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will show "EQ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "EQ" will not be shown in LCD main page.	